



ParKolor 200HD



GUIDE DE DÉMARRAGE

Réglementation

Cet appareil est parfaitement conçu. Il répond aux dispositions réglementaires actuelles : CE, ROHS, R&TTE

Recyclage

Appareil soumis à la DEEE (Collecte sélective). Contribuez à la protection de l'environnement en éliminant les matériaux d'emballage de ce produit via les filières de recyclage appropriées. Recyclez ce produit via une filière DEEE (déchets d'équipements électroniques). Ce produit doit être repris par votre revendeur ou doit être déposé dans un centre de collecte spécifique (déchetterie).

Garantie applicable en France

Le fabricant a apporté le plus grand soin à la conception et à la fabrication de votre produit pour qu'il vous apporte entière satisfaction. Néanmoins, s'il apparaissait que votre produit était défectueux, vous bénéficiez d'une garantie commerciale de 24 mois à compter de la date d'achat. Pour mettre en œuvre cette garantie, l'utilisateur doit présenter le produit au distributeur, accompagné du ticket de caisse ou la facture d'achat accompagnée du numéro de série.

Cette garantie, applicable en France, couvre tous les défauts du produit qui ne permettent pas une utilisation normale du produit. Elle ne couvre pas les défauts liés à un mauvais entretien, une utilisation inappropriée, une usure prévisible ; ou si les recommandations du fabricant n'ont pas été respectées.

La garantie ne couvre pas l'usure normale des pièces liée à l'utilisation du produit, tel que Batterie, Lampe, Roues, pièces d'usures, etc...

Eu égard au défaut et à la pièce concernée, le garant décidera alors de procéder à la réparation ou au remplacement de ladite pièce.

Le garant est : **CSI AUDIOVISUEL, 22, RUE ÉDOUARD BUFFARD -MONTEVRAIN 77771 MARNE-LA-VALLÉE , 01.48.63.22.11.**

La durée de fourniture de pièces détachées est de deux ans.

La garantie commerciale prévue ci-dessus ne limite aucunement le droit de l'acheteur d'agir en garantie des vices cachés ou de non-conformité, tel que prévu aux codes civil et de la consommation Française.

Consignes de sécurité

VEUILLEZ LIRE ATTENTIVEMENT ET CONSERVEZ CE MANUEL

Toute personne impliquée dans l'installation, l'utilisation et la maintenance de cet appareil doit être qualifiée et suivre les instructions comprises dans ce manuel.

Soyez prudent risques de chocs électriques !

Avant la mise en fonction, soyez certain que le produit n'ait pas subi de dommage durant le transport. Dans le cas contraire, contactez votre revendeur.

Afin de maintenir l'appareil en parfaites conditions, l'utilisateur doit suivre les instructions de sécurité et d'utilisation décrites dans ce présent document.

Notez que les dysfonctionnements liés à la modification de l'appareil ne sont pas couverts par la garantie.

Cet appareil ne contient aucune partie remplaçable par l'utilisateur, pour toute intervention contactez votre revendeur.

Soyez prudent risque photo-biologique !



**Attention !! Système d'éclairage professionnel
ne pas regarder le flux lumineux dans l'axe.**



Risque d'incendie maintenir une distance minimale de 1 m entre le faisceau et une surface inflammable.

IMPORTANT :

Cet appareil doit être utilisé avec une température ambiante inférieure à 45°.

Fixer le projecteur d'une façon stable.

Ne pas faire cheminer le câble d'alimentation avec les autres câbles.

Manipuler le câble d'alimentation avec les précautions d'usage.

Ne pas insérer d'objets dans les aérations.

Ne pas démonter ou modifier l'appareil. Risque d'électrocution !

Ne pas connecter cet appareil à un bloc de puissance.

Ne pas mettre En / Hors fonction de manière répétée.

Cet appareil doit être relié à la terre

N'utiliser cet appareil qu'après vous être familiarisé avec ses commandes et fonctions.

Éviter tout contact avec les flammes, éloignez l'appareil des surfaces inflammables.

Laisser toujours un espace suffisant autour de l'appareil pour permettre sa convection.

Déconnecter l'appareil du secteur, lorsqu'il n'est pas utilisé ou avant de le nettoyer.

Toujours débrancher l'alimentation en tenant la prise secteur et non le câble.

Vérifier que le cordon d'alimentation ne soit ni pincé ni endommagé, (prises et câbles)

Si l'appareil est tombé ou à reçu un choc, déconnecter le immédiatement du secteur et contacter un technicien qualifié pour le vérifier.

Si l'appareil a été soumis à d'importantes fluctuations de température, ne le mettez pas en fonction immédiatement, la condensation pourrait l'endommager en créant un CC (court-circuit).

Si l'appareil ne fonctionne pas correctement, mettez-le hors fonction immédiatement. Emballer-le, (de préférence dans son emballage d'origine).

Ce produit doit être utilisé exclusivement par un adulte en bonne santé.

Il doit être installé hors de portée des enfants.

Ne jamais utiliser le produit sans surveillance.

Ne pas utiliser l'appareil dans des zones ATEX ou et à proximité de d'hydrocarbure ou de produit inflammable.

Cet appareil doit être utilisé conformément à ce manuel, pour éviter tous dysfonctionnement

Nettoyage

Penser à nettoyer régulièrement l'optique avec un chiffon micro-pore.

L'usage d'air comprimé permet de nettoyer le boîtier.

Le projecteur doit être sécurisé par une élingue de sécurité

Be green with* Starway!







Starway prend soin de notre belle planète et adopte l'éco-attitude !
Retrouvez les manuels en ligne et bien plus encore en flashant
le QR code apposé sur les produits !

Projecteur en fonte d'aluminium de très belle finition, le ParKolor 200HD est équipé d'une LED COB de 180W RGBW qui procure un flux 2 fois supérieur à celui de son célèbre prédécesseur Parkolor 120HD. Son design conçu pour un échange thermique maximum et l'adjonction de 2 ventilateurs autorisent un fonctionnement permanent sans perte de flux à puissance maximum. Un accessoire livré avec le projecteur apporte une protection contre l'eau aux différents connecteurs, autorisant ainsi son utilisation en extérieur pendant de longues périodes. Comme le 120HD, le ParKolor 200HD dispose d'un zoom offrant une plage de réglage similaire de 8 à 44.5°.

SPÉCIFICATIONS TECHNIQUES :

- Led COB RGBW 180W
- Zoom 8 ° - 44.5 ° beam
- Flux lumineux : 4365 Lm (Zoom max)
- Protocoles: DMX / RDM
- DMX modes: 6HSI/6RGB/7/10/15ch
- Auto / Statique / Maître-Esclave
- BColor System
- Macros de Blanc : 10 de 2700 à 10,000 ° K
- Connecteurs DMX In / Out : 2 x XLR5 IP65
- Connecteurs Alimentation In / Out : Seetronic IP65
- Casquette amovible de protection des connecteurs
- Refroidissement :
 - 1 mode convection naturelle
 - 3 modes de ventilation forcée
- Dimensions : L x P x H: 329.5 x 215 x 370mm
- Poids : 10.3Kg
- Consommation max : 200W

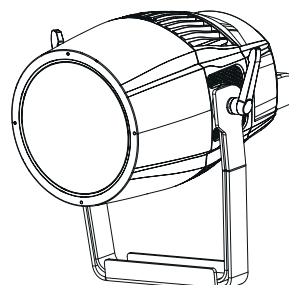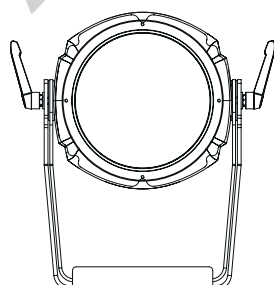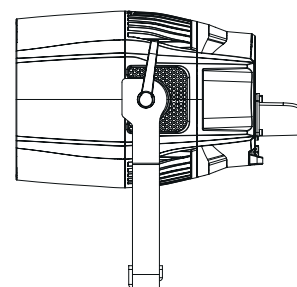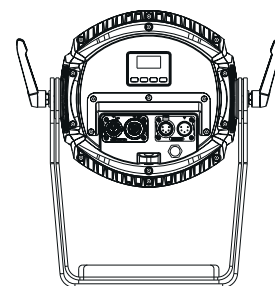

Enh 16bits mode 15 canaux

Canal	Fonction	Valeur	Fonction	Instant ou fade	Valeur par défaut
1	Dimmer	000-65535	Dimmer 0% à 100%	F	0
2	Dimmer fine				
3	Shutter	000-005	Shutter OFF si Off est sélectionné dans le Menu Shutter ON si ON est sélectionné dans le Menu	I	3/8
		006-010	Shutter ON si Off est sélectionné dans le Menu Shutter OFF si ON est sélectionné dans le Menu		
		011-090	Strobe lent à rapide		
		91-170	Strobe random lent à rapide		
		171-255	Strobe random synchronisé sur tous les appareils		
4	Zoom	000-255	Zoom 0% à 100%	F	255
5	Rouge	000-65535	Rouge 0% à 100%	F	255
6	Rouge Fin				
7	Vert	000-65535	Vert 0% à 100%	F	255
8	Vert Fin				
9	Bleu	000-65535	Bleu 0% à 100%	F	255
10	Bleu Fin				
11	Blanc	000-65535	Blanc 0% à 100%	F	255
12	Blanc Fin				
13	Roue de couleur virtuelle	000	RGBW Full	I	0
		001	10000°K		
		002	8000°K		
		003	6500°K		
		004	5600°K		
		005	5000°K		
		006	4500°K		
		007	4000°K		
		008	3200°K		
		009	3000°K		
		010	2700°K		
		011-250	Roue de couleur virtuelle		
		251	Idle		
		252-253	Rotation sens horaire de la roue de couleurs virtuelle		
254-255	Rotation sens antihoraire de la roue de couleurs virtuelle				
14	Color Time	000-255	Temps de fade entre les couleurs virtuelles ou vitesse de rotation de roue de couleur virtuelle	I	255
15	Contrôle	000-010	Dim mode selon menu du projecteur	I	80
		011-020	Dim0		
		021-030	Dim1		
		031-040	Dim2		
		041-050	Dim3		
		051-060	Dim4		
		061-100	Idle		
		101-110	FAN OFF		
		111-120	Fan Quiet		
		121-130	Fan auto		
		131-140	Fan High		
		141-150	Fast Dimmer Off		
		151-160	Fast Dimmer ON		
		161-200	Idle		
		201-255	Zoom reset		

Retrouvez les différents modes DMX sur le manuel disponible en flashant le QR code apposé sur les produits ou en cliquant sur le lien ci dessous :

http://tech.starway.eu/225475_PARKOLOR200HD/225475_PARKOLOR200HD_ML.pdf



STARWAY

22, RUE ÉDOUARD BUFFARD - MONTEVRAIN 77771

France

Tél. : +33 (0)820 230 007





ParKolor 200HD



QUICK START

WARNING! Before carrying out any operations with the unit, carefully read this instruction manual and keep it with care for future reference. It contains important information about the installation, usage and maintenance of the unit.

SAFETY

GENERAL INSTRUCTION

- The products referred to in this manual conform to the European Community Directives and are therefore marked with CE.
- The unit is supplied with hazardous network voltage (230V~). Leave servicing to skilled personnel only. Never make any modifications on the unit not described in this instruction manual, otherwise you will risk an electric shock.
- Connection must be made to a power supply system fitted with efficient earthing (Class I appliance according to standard EN 60598-1). It is, moreover, recommended to protect the supply lines of the units from indirect contact and/or shorting to earth by using appropriately sized residual current devices.
- The connection to the main network of electric distribution must be carried out by a qualified electrical installer. Check that the main frequency and voltage correspond to those for which the unit is designed as given on the electrical data label.
- Never use the fixture under the following conditions:
 - in places wet;
 - in places subject to vibrations or bumps;
 - in places with an ambient temperature of over 45° C.
- Make certain that no inflammable liquids, water or metal objects enter the fixture.
- Do not dismantle or modify the fixture.
- All work must always be carried out by qualified technical personnel. Contact the nearest sales point for an inspection or contact the manufacturer directly.
- If the unit is to be put out of operation definitively, take it to a local recycling plant for a disposal which is not harmful to the environment.

WARNINGS AND INSTALLATION PRECAUTIONS

- Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!
- Never modify, bend, mechanically strain, put pressure on, pull or heat up the power cord.
- Never strain the cable. There must always be sufficient cable going to the device. Otherwise, the cable will be damaged, which can cause serious damage.
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never lift the device holding it by the projector-head, as the mechanics may be damaged
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only operate the device after having checked if the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always allow a free air space of at least 0.8 m around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power cord holding it by the plug. Never pull out the plug by tugging the power cord.
- Make sure that the device is not exposed to extreme heat or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged. Check the device and the power cord from time to time.
- Make sure that the core diameter of extension cords and power cords is sufficient for the required power consumption of the device.
- Always hold the device by the transport handles.
- Never place any material over the LEDs or lens.
- Never look directly into the light source.
- Never leave any cables lying around.
- Never use the device during thunderstorms, unplug the device immediately.
- Never leave various parts of the packaging (plastic bags, polystyrene foam, nails, etc within children's reach, as they potential sources of danger.
- Do not insert objects into air vents.
- Do not open the device and do not modify the device.
- Do not connect this device to a dimmer pack.
- Do not switch the device on and off in short intervals, as this will reduce the device's life.
- Do not touch the device's housing bare-handed during its operation (housing becomes very hot). Allow the device to cool for at least 5 minutes before handling.
- If the lens or LEDs are obviously damaged, they need to be replaced to prevent their functions from being impaired, due to cracks or deep scratches.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If device was dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your device fails to work properly, discontinue the use immediately. Pack the unit securely (preferably in the original packing material), and return it to your dealer for service.
- For adult use only. The device must be installed beyond the reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement use fuses of same type and rating only.
- This device is heavy. When handling, use a two-person lift to prevent injury.
- The user is responsible for correct positioning and operating of the device. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- Repairs, servicing and electric connection must be carried out by a qualified technician.

Rigging

**This device is heavy. When handling, use a two-person lift to prevent injury.
Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.**

Be green with Starway!







Starway takes care of our beautiful planet and adopts the eco-attitude!
Find manuals online and more by flashing the QR code on the products!

A beautifully finished cast aluminum projector, ParKolor 200HD is equipped with a 180W RGBW COB LED which provides twice the flow of its famous predecessor Parkolor 120HD. Its design designed for maximum heat exchange and the addition of 2 fans allow permanent operation without loss of flow at maximum power. An accessory delivered with the projector provides protection against water to the various connectors, allowing its use outdoors for long periods. Like the 120HD, ParKolor 200HD has a zoom lens offering a similar adjustment range of 8 to 44.5 °.

TECHNICAL SPECIFICATIONS :

- Led COB RGBW 180W
- Zoom 8 ° - 44.5 ° beam
- Max flux 4365 Lm (Zoom max)
- Protocols: DMX / RDM
- DMX modes: 6HSI/6RGB/7/10/15ch
- Auto / Static / Master-Slave
- BColor System
- White Macros : 10 from 2700 to 10,000 ° K
- DMX Connectors In / Out : 2 x XLR5 IP65
- Power Connectors In / Out : Seetronic IP65
- Removable connector protection cap
- Cooling :
 - 1 natural convection mode
 - 3 forced ventilation modes
- Dimensions L x P x H: 329.5 x 215 x 370mm
- Weight: 10.3Kg
- Max power: 200W

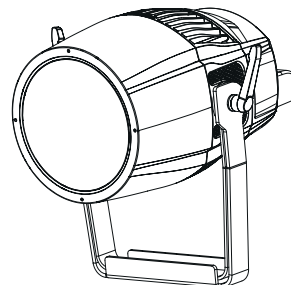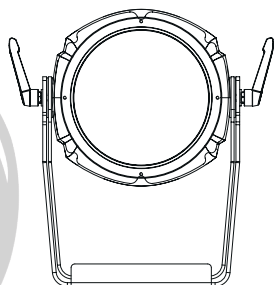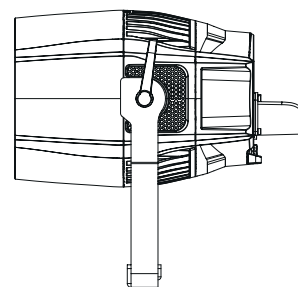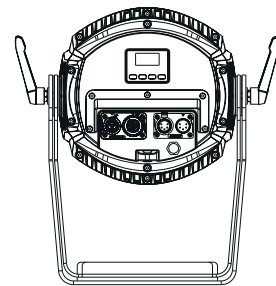

Enh 16bits mode 15 channels

Ch	Function	Value	Fonction	Instant ou fade	Default Values
1	Dimmer	000-65535	Dimmer 0% à 100%	F	0
2	Dimmer fine				
3	Shutter	000-005	Shutter OFF if default OFF selected in Menu Shutter ON if default ON selected in menu	I	3/8
		006-010	Shutter ON if default Off selected in Menu Shutter OFF if default ON selected in menu		
		011-090	Strobe from slow to fast		
		091-170	Strobe random slow to fast		
		171-255	Strobe random synchronized on all fixtures		
4	Zoom	000-255	Zoom 0% à 100%	F	255
5	Red	000-65535	Red 0% à 100%	F	255
6	Red Fine				
7	Green	000-65535	Green 0% à 100%	F	255
8	Green Fine				
9	Blue	000-65535	Blue 0% à 100%	F	255
10	Blue Fine				
11	White	000-65535	White 0% à 100%	F	255
12	White Fine				
13	Virtual Color Wheel	000	Full Power RGBW	I	0
		001	10000°K		
		002	8000°K		
		003	6500°K		
		004	5600°K		
		005	5000°K		
		006	4500°K		
		007	4000°K		
		008	3200°K		
		009	3000°K		
		010	2700°K		
		011-250	Virtual Color Wheel		
		251	Idle		
		252-253	Clockwise rotation of the virtual color wheel		
254-255	Counter clockwise rotation of the virtual color wheel				
14	Color Time	000-255	Fade time between virtual colors or virtual color wheel rotation speed	I	255
15	Control	000-010	Dim mode selected from projector menu	I	80
		011-020	Dim0		
		021-030	Dim1		
		031-040	Dim2		
		041-050	Dim3		
		051-060	Dim4		
		061-100	Idle		
		101-110	Fan Silent		
		111-120	Fan Quiet		
		121-130	Fan auto		
		131-140	Fan High		
		141-150	Fast Dimmer Off		
		151-160	Fast Dimmer ON		
		161-200	Idle		
		201-255	Zoom reset		

Find the different DMX modes on the manual available by flashing the QR code affixed to the products or by clicking on the link below:

http://tech.starway.eu/225475_PARKOLOR200HD/225475_PARKOLOR200HD_ML.pdf

Please note that the manuals are multi-language



STARWAY

22, RUE ÉDOUARD BUFFARD - MONTEVRAIN 77771

France

Tél. : +33 (0)820 230 007

